



P101-102

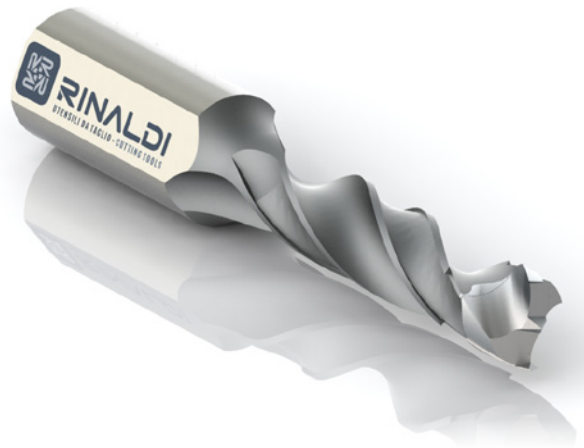

Punte per fori ciechi con cuspide in HW integrale

Drills for blind holes with HW-tip

Bohrer für Sacklöcher mit HW-Spitze

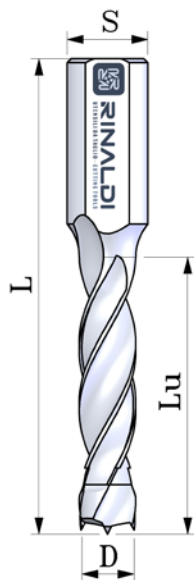

CODICE	D	L	Lu	S	Rot.
P101-05D	5	55.5	30	8x20	RH
P101-06D	6	55.5	30	8x20	RH
P101-07D	7	55.5	30	8x20	RH
P101-08D	8	55.5	30	8x20	RH
P101-09D	9	55.5	30	8x20	RH
P101-10D	10	55.5	30	8x20	RH
P101-12D	12	55.5	30	8x20	RH
P101-05S	5	55.5	30	8x20	LH
P101-06S	6	55.5	30	8x20	LH
P101-07S	7	55.5	30	8x20	LH
P101-08S	8	55.5	30	8x20	LH
P101-09S	9	55.5	30	8x20	LH
P101-10S	10	55.5	30	8x20	LH
P101-12S	12	55.5	30	8x20	LH
P102-05LD	5	67	40	8x20	RH
P102-06LD	6	67	40	8x20	RH
P102-07LD	7	67	40	8x20	RH
P102-08LD	8	67	40	8x20	RH
P102-09LD	9	67	40	8x20	RH
P102-10LD	10	67	40	8x20	RH
P102-12LD	12	67	40	8x20	RH
P102-05LS	5	67	40	8x20	LH
P102-06LS	6	67	40	8x20	LH
P102-07LS	7	67	40	8x20	LH
P102-08LS	8	67	40	8x20	LH
P102-09LS	9	67	40	8x20	LH
P102-10LS	10	67	40	8x20	LH
P102-12LS	12	67	40	8x20	LH