
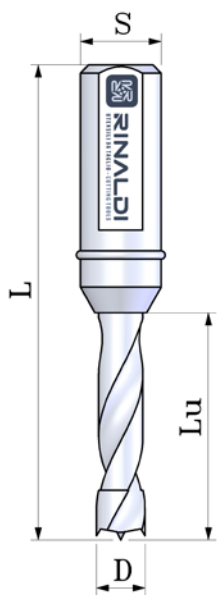


P116-117

Punte per fori ciechi in HW integrale

Solid HW drills for blind holes

VHW-Bohrer für Sacklöcher

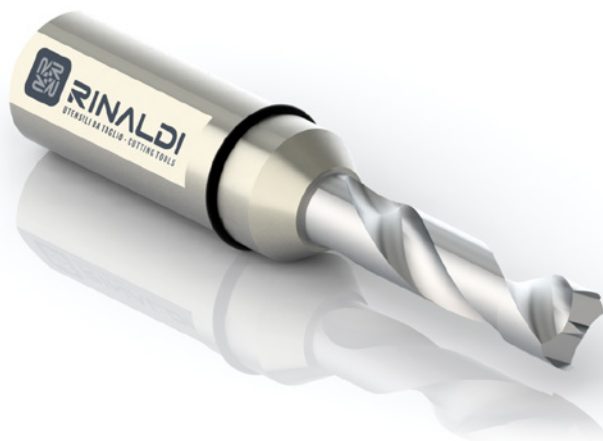

CODICE	D	L	Lu	S	Rot.
P116-03D	3	57.5	20	10x32	RH
P116-04D	4	57.5	23	10x27	RH
P116-05D	5	57.5	23	10x27	RH
P116-06D	6	57.5	23	10x27	RH
P116-64D	6.4	57.5	23	10x27	RH
P116-07D	7	57.5	23	10x27	RH
P116-08D	8	57.5	23	10x27	RH
P116-03S	3	57.5	20	10x32	LH
P116-04S	4	57.5	23	10x27	LH
P116-05S	5	57.5	23	10x27	LH
P116-06S	6	57.5	23	10x27	LH
P116-64S	6.4	57.5	23	10x27	LH
P116-07S	7	57.5	23	10x27	LH
P116-08S	8	57.5	23	10x27	LH
P117-03D	3	70	20	10x38	RH
P117-04D	4	70	30	10x30	RH
P117-05D	5	70	30	10x30	RH
P117-06D	6	70	30	10x30	RH
P117-64D	6.4	70	30	10x30	RH
P117-07D	7	70	30	10x30	RH
P117-08D	8	70	30	10x30	RH
P117-03S	3	70	20	10x38	LH
P117-04S	4	70	30	10x30	LH
P117-05S	5	70	30	10x30	LH
P117-06S	6	70	30	10x30	LH
P117-64S	6.4	70	30	10x30	LH
P117-07S	7	70	30	10x30	LH
P117-08S	8	70	30	10x30	LH