
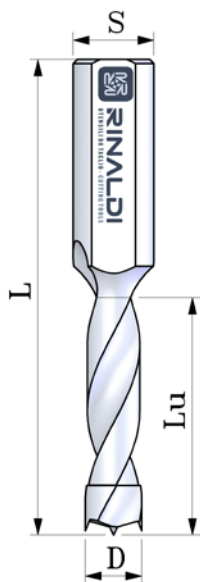


P114-115

Punte per fori ciechi con cuspidi in HW integrale

Drills for blind holes with HW-tip

Bohrer für Sacklöcher mit HW-Spitze

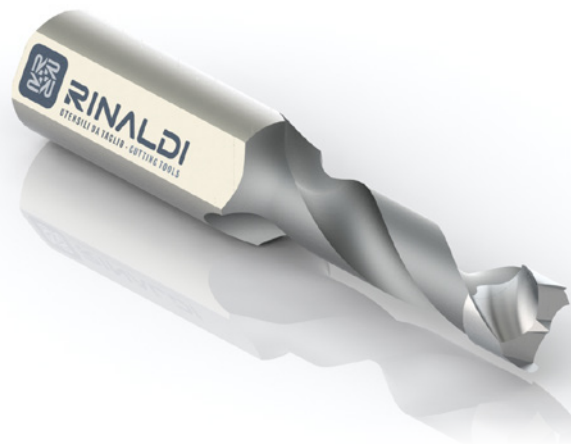

CODICE	D	L	Lu	S	Rot.
P114-05D	5	57.5	27	10x27	RH
P114-06D	6	57.5	27	10x27	RH
P114-64D	6.4	57.5	27	10x27	RH
P114-07D	7	57.5	27	10x27	RH
P114-08D	8	57.5	27	10x27	RH
P114-10D	10	57.5	27	10x27	RH
P114-12D	12	57.5	27	10x27	RH
P114-05S	5	57.5	27	10x27	LH
P114-06S	6	57.5	27	10x27	LH
P114-64S	6.4	57.5	27	10x27	LH
P114-07S	7	57.5	27	10x27	LH
P114-08S	8	57.5	27	10x27	LH
P114-10S	10	57.5	27	10x27	LH
P114-12S	12	57.5	27	10x27	LH
P115-05D	5	70	35	10x30	RH
P115-06D	6	70	35	10x30	RH
P115-64D	6.4	70	35	10x30	RH
P115-07D	7	70	35	10x30	RH
P115-08D	8	70	35	10x30	RH
P115-10D	10	70	35	10x30	RH
P115-12D	12	70	35	10x30	RH
P115-05S	5	70	35	10x30	LH
P115-06S	6	70	35	10x30	LH
P115-64S	6.4	70	35	10x30	LH
P115-07S	7	70	35	10x30	LH
P115-08S	8	70	35	10x30	LH
P115-10S	10	70	35	10x30	LH
P115-12S	12	70	35	10x30	LH