


# 111-G/O/B

## Sgorbie per torni copiativi


Gouges for copying lathes

Hohleisen für Kopierdrehbanke

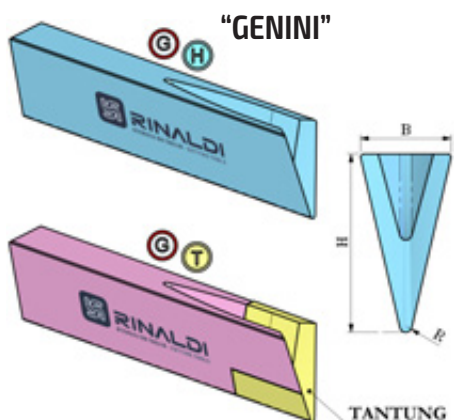


### Torni "GENINI"

CODICE	B	H	L	R	Tipo	Macchina	Materiale
111-1-05GH	15	29	115	0.5	GH	GENINI	HSS-Co
111-1-05GT	15	29	115	0.5	GT	GENINI	Tantung
111-1-10GH	15	29	115	1	GH	GENINI	HSS-Co
111-1-10GT	15	29	115	1	GT	GENINI	Tantung
111-2-05GH	15	29	140	0.5	GH	GENINI	HSS-Co
111-2-05GT	15	29	140	0.5	GT	GENINI	Tantung
111-2-10GH	15	29	140	1	GH	GENINI	HSS-Co
111-2-10GT	15	29	140	1	GT	GENINI	Tantung

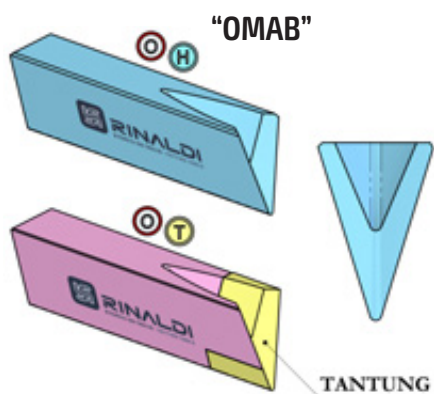

### Torni "OMAB"

CODICE	B	H	L	R	Tipo	Macchina	Materiale
111-5-05OH	20	30	100	0.5	OH	OMAB	HSS-Co
111-5-05OT	20	30	100	0.5	OT	OMAB	Tantung
111-5-10OH	20	30	100	1	OH	OMAB	HSS-Co
111-5-10OT	20	30	100	1	OT	OMAB	Tantung
111-6-40OH	20	30	100	4	OH	OMAB	HSS-Co
111-6-40OT	20	30	100	4	OT	OMAB	Tantung
111-7-80OH	20	30	100	8	OH	OMAB	HSS-Co
111-7-80OT	20	30	100	8	OT	OMAB	Tantung

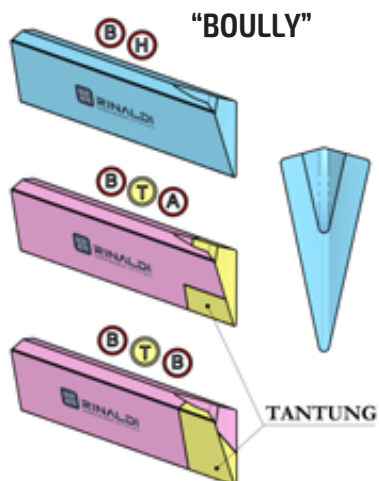

### Torni "BOULLY" "HAPFO"

CODICE	B	H	L	R	Tipo	Macchina	Materiale	Cod.Mola
111-12-06BH	17.5	39	140	0.6	BH	BOULLY	HSS-Co	MST-A511806
111-12-06BTA	17.5	39	140	0.6	BTA	BOULLY	Tantung	MST-A511806
111-12-06BTB	17.5	39	140	0.6	BTB	BOULLY	Tantung	MST-A511806
111-12-10BTA	17.5	39	140	1	BTA	BOULLY	Tantung	MST-A511810
111-12-10BTB	17.5	39	140	1	BTB	BOULLY	Tantung	MST-A511810
111-12-20BH	17.5	39	140	2	BH	BOULLY	HSS-Co	MST-A511820

# 111-L/C/I


## Sgorbie per torni copiativi

Gouges for copying lathes

Hohlsen für Kopierdrehbanke




### "LOCATELLI"

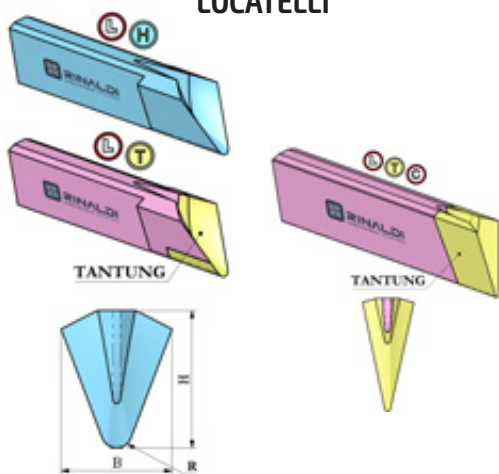

### Torni "LOCATELLI"

CODICE	B	H	L	R	Tipo	Macchina	Materiale	Cod.Mola
111-8-06LH	18	40	140	0.6	LH	LOCATELLI	HSS-Co	MST-A401906
111-8-06LT	17.2	38	140	0.6	LT	LOCATELLI	Tantung	MST-A401906
111-8-06LTC	18	40	140	0.6	LTC	LOCATELLI	Tantung	MST-A401906
111-8-10LH	18	40	140	1	LH	LOCATELLI	HSS-Co	MST-A401910
111-8-10LT	18	40	140	1	LT	LOCATELLI	Tantung	MST-A401910
111-8-10LTC	18	40	140	1	LTC	LOCATELLI	Tantung	MST-A401910
111-9-40LH	28	37	140	4	LH	LOCATELLI	HSS-Co	MST-A433040
111-9-40LT	28	38	140	4	LT	LOCATELLI	Tantung	MST-A433040
111-10-75LH	33	37	140	7.5	LH	LOCATELLI	HSS-Co	MST-A433575
111-10-75LT	33	38	140	7.5	LT	LOCATELLI	Tantung	MST-B433575
111-11-12LH	35	40	140	12	LH	LOCATELLI	HSS-Co	MST-A433712


### "CENTAURO"

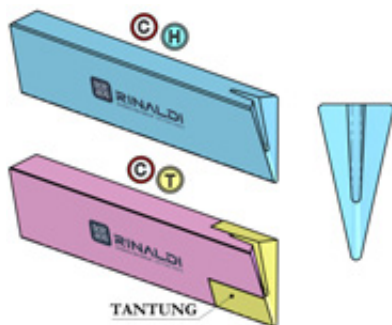

### Torni "CENTAURO"

CODICE	B	H	L	R	Tipo	Macchina	Materiale	Cod.Mola
111-3-06CH	17.8	38	140	0.6	CH	CENTAURO	HSS-Co	MST-A601806
111-3-06CT	17.8	38	140	0.6	CT	CENTAURO	Tantung	MST-A531806
111-3-121CH	17.8	38	110	1.2	CH	CENTAURO	HSS-Co	MST-A601812
111-3-121CT	17.8	38	110	1.2	CT	CENTAURO	Tantung	MST-A531812
111-3-12CH	17.8	38	140	1.2	CH	CENTAURO	HSS-Co	MST-A601812
111-3-12CT	17.8	38	140	1.2	CT	CENTAURO	Tantung	MST-A531812
111-4-35CH	22.5	38	140	3.5	CH	CENTAURO	HSS-Co	MST-A552335
111-4-35CT	22.5	38	140	3.5	CT	CENTAURO	Tantung	MST-A502335

### "INTOREX"

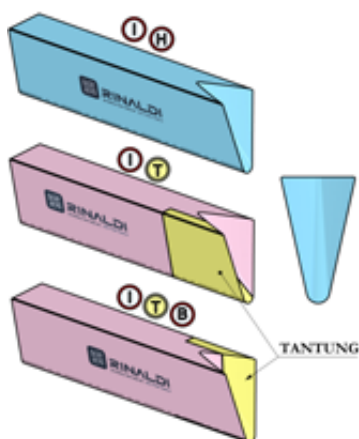

### Torni "INTOREX"

CODICE	B	H	L	R	Tipo	Macchina	Materiale	Cod.Mola
111-11-05ITB	17.8	38	140	0.5	ITB	INTOREX	Tantung	MST-A501805
111-11-06IH	17.8	38	140	0.6	IH	INTOREX	HSS-Co	MST-A601806
111-11-06IT	17.8	38	140	0.6	IT	INTOREX	Tantung	MST-A531806
111-11-12IH	18.8	38	140	1.2	IH	INTOREX	HSS-Co	MST-A602012
111-11-12IT	18.8	38	140	1.2	IT	INTOREX	Tantung	MST-A532012
111-11-15IH	19.3	38	140	1.5	IH	INTOREX	HSS-Co	MST-A602015
111-11-15IT	19.3	38	140	1.5	IT	INTOREX	Tantung	MST-A532015
111-11-35IH	22.5	38	140	3.5	IH	INTOREX	HSS-Co	MST-A552535
111-11-35IT	23	38	140	3.5	IT	INTOREX	Tantung	MST-A502535